



BRK RELAY

ON-VEHICLE INSPECTION

1. INSPECT BRK RELAY

- Remove the BRK relay from the engine room No. 1 relay block.
- Measure the resistance of the relay.

Standard resistance

Tester Connection	Specified Condition
3 - 4	Below 1 Ω
3 - 4	10 k Ω or higher (Battery voltage applied to terminals 1 and 2)
3 - 5	10 k Ω or higher
3 - 5	Below 1 Ω (Battery voltage applied to terminals 1 and 2)

If the result is not as specified, replace the relay.